

CORDLESS ZEBRA BLINDS

DESIGN BY HUNTERS



ZEBRA BLINDS

Office

SUN SHADING, LIGHT ADJUSTING & CREATING BETTER OFFICE AMBIENCE



Bedroom

CREATES A BETTER SLEEPING ENVIRONMENT



Living room

RICH IN ARTISTIC ATMOSPHERE

Dining room

MORE WARM



Hotel

CAN BE APPLIED TO HOTEL ROOMS AND LOBBIES













Structural diagram



- 1. Cover
- 2. Caps
- 3. Fabric
- 4. Bottom rail caps

- 5. Bottom rail
- 6. Clear handle

Components List

Fabric		<p>Fabric Size: 75mm(Details as actual size) Sheer Size: 50mm(Details as actual size) Material: Polyester 100% Color: Choose as Fabric book There are more colors available, please contact customer service for E-catalog fabric book.</p>
Cover		<p>Size: 73x73mm Material: Aluminum Thickness:1.2mm Color: Choose as stock color Special color could be customized (MOQ:500pcs)</p>
Caps		<p>Size: 73x73mm Material: POM Color: White/Grey/Beige/Matt black Match with top cover</p>
Tube		<p>Size:Ø38 Material:Aluminum Thickness: 1.2mm Color:white Powder coated Matched Color Technology</p>
Spring system		<p>Size: Ø38x189x35mm Material: POM Color: White</p>
Tail Plug		<p>Size: Ø38 Material: POM Color: White</p>
Rotating shaft		<p>Size:Ø16mm Material:Aluminum Color:White</p>
Bottom rail		<p>Size: 27x46mm Material: Aluminum Colour: Choose as stock color Thickness:2.2mm</p>
Bottom rail caps		<p>Size: 30x46mm Material: POM Colour: Black</p>
Clear handle		<p>Size:80x55mm Material: PVC Colour: Clear</p>
Bracket		<p>Size: 73x30x37mm(L x W x H) Material: 304 Steel + POM Spring Insert Clip fix and easy mounting Perfect privacy after mounting</p>
Expansion screws		<p>Size:M6x30mm</p>

Measuring method

Installation of softness blinds have two methods: inside mount & outside mount.

Measuring method for Inside mount:

Horizontal direction (Width) measure inside of window: top, middle and bottom three points (as below pics in orange line show)

Vertical direction (Height) measure inside of window: left and right side (as below pic in orange line show)


The sizes for window's width & height **choose the minimum ones** as the window size. **For width of ready made blinds, advise to deduct 5-10mm for tolerance.**

Measure method for Outside mount:


Horizontal direction (Width) measure inside of window: top, middle and bottom three points (as below pics in grey line show)

Vertical direction (Height) measure inside of window: left and right side (as below pic in grey line show)


The sizes for window's width & height **choose the maximum ones** as the window size. **For width of ready made blinds, advise to add 100mm for Window's width& height to make sure blinds total cover the window frame.**

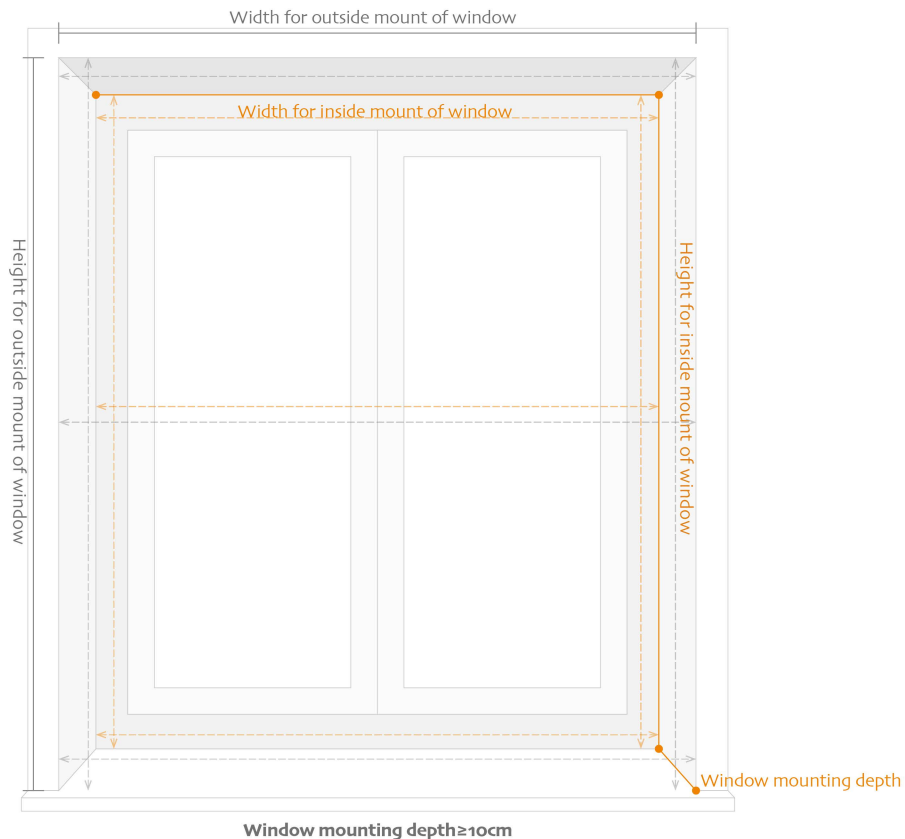

Installation Type

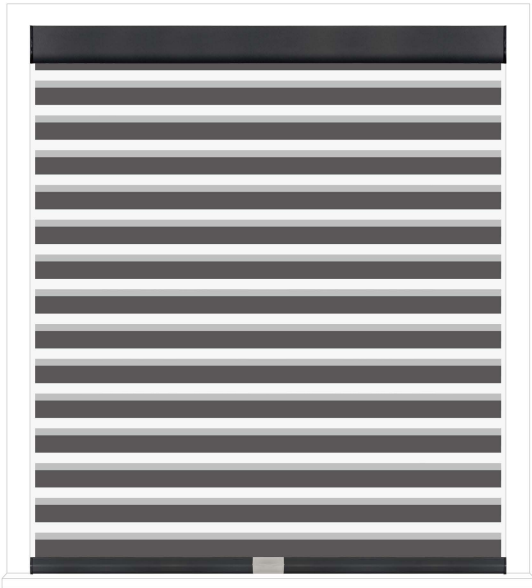

Inside mount

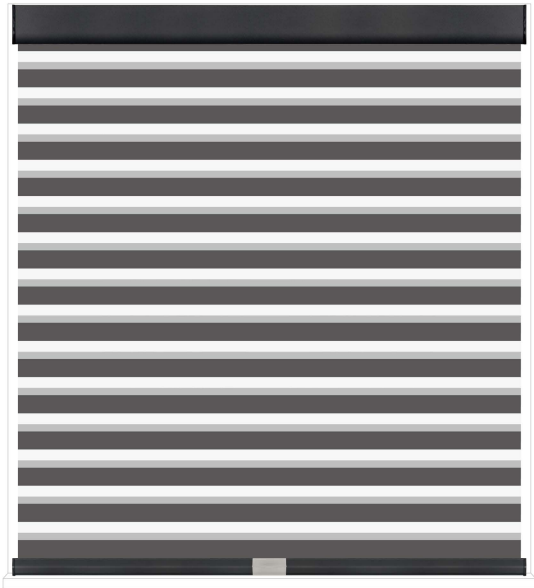


Outside mount


How to determine the installation type?



Sliding window
INSIDE MOUNT
/OUTSIDE MOUNT

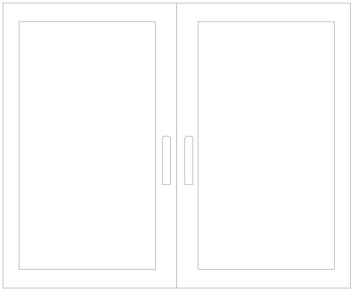

Inside open window
OUTSIDE MOUNT

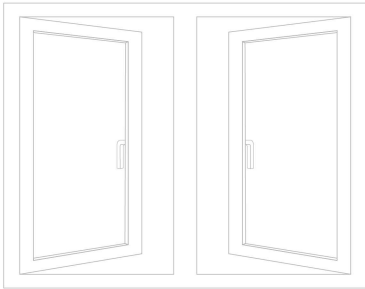

Outside open window
INSIDE MOUNT
/OUTSIDE MOUNT

Package types

Inner packing



Clear PVC Box



Air bubble wrap



Outer Packing



5 layers thicken carton + angle protection for 4 edges

Packing Real Site



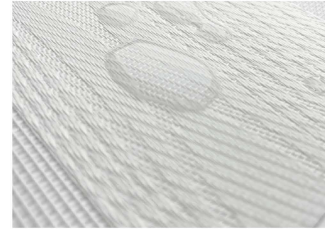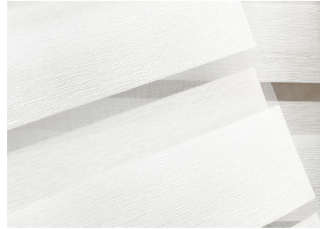

Tianjin Hunters Technology Co., Ltd

📍 No.6 building, Changqingteng Art & Industrial Park, No.10 Caizhi Road,
Jingwu town, Xiqing District, Tianjin, China. Post code: 300392

☎ +86 22 23982209

☎ +86 15922294041

✉ laura001@aliyun.com