



CORDLESS HONEYCOMB BLINDS

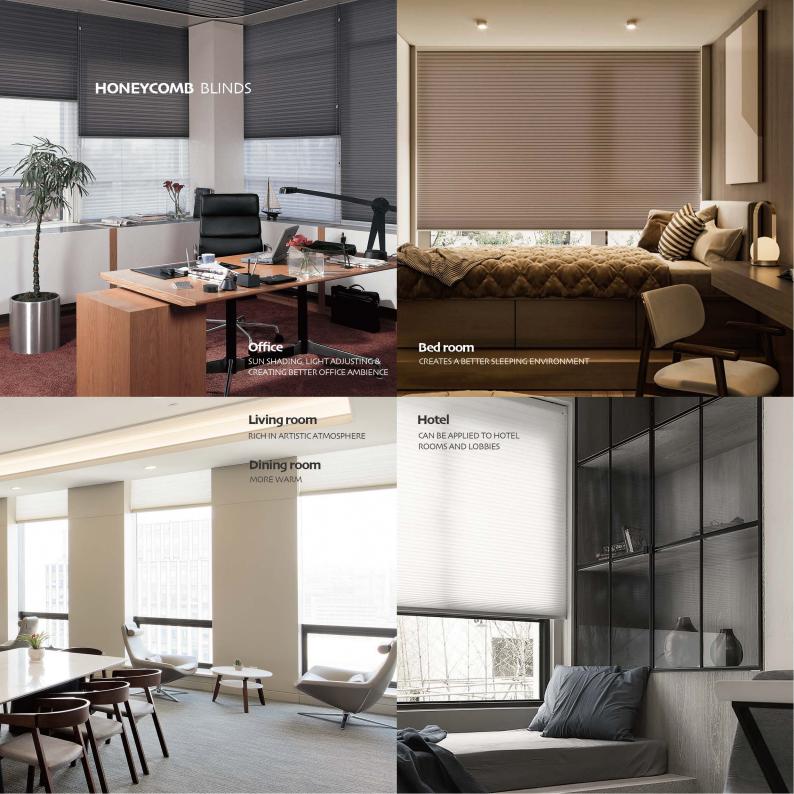

Structural diagram

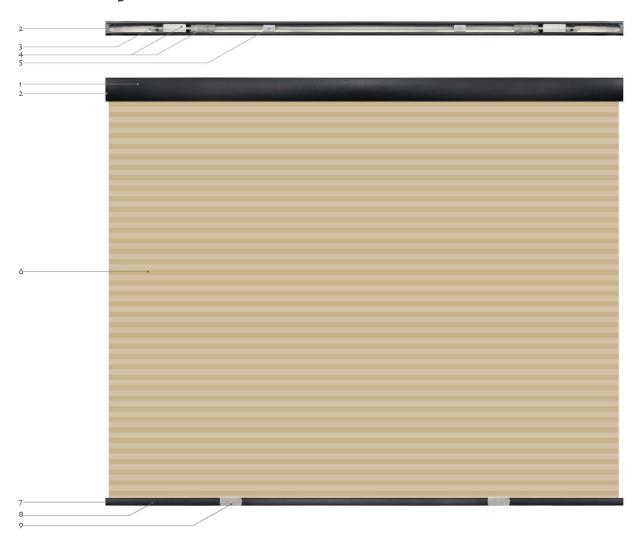

- 1. Top track
- 2. Caps
- 3. Transmisson rod
- 4. Reel

- 5. Bracket
- 6. Fabric
- 7. Bottom rail caps
- 8. Bottom rail

9. Clear handle

Components List

Fabric		Size:25mm/45mm Material: Polyester 100% Color: Choose as Fabric book There are more colors available, please contact customer service for E-catalog fabric book.
Top track		Size: 32×43mm Material: Aluminum Thickness: 0.9mm Color: Choose as stock color Special color could be customized (MOQ:500pcs)
Caps		Size: 32x43mm Material: POM Color: Black Match with top cover
Reel		Size:50x20x36mm Material: POM Color: White
Reel		Size: 50x14x36mm Material: POM Color: White
Bracket		Size: 20x20x35mm Material: POM Color: White
Transmisson rod		Size:Ø6mm Material:PVC Color:White
Bottom rail		Size: 29x14mm Material: Aluminum Colour: Choose as stock color Thickness:0.9mm
Bottom rail caps		Size: 29x14mm Material: POM Colour: Black
Clear handle		Size:40x12x28mm Material: PVC Colour: Clear
Bracket	TT	Size: 40x30x27mm(L x W x H) Material: 304 Steel + POM Spring Insert Clip fix and easy mounting Perfect privacy after mounting
Expansion screws	# #	Size:Móx3omm

Measuring method

Installation of honeycomb blinds have two methods: inside mount & outside mount.

Measuring method for Inside mount:


Horizontal direction (Width) measure inside of window: top, middle and bottom three points (as below pics in orange line show) Vertical direction (Height) measure inside of window: left and right side (as below pic in orange line show)

The sizes for window's width & height choose the minimum ones as the window size. For width of ready made blinds, advise to deduct 5-10mm for tolerance.

Measure method for Outside mount:

Horizontal direction (Width) measure inside of window: top, middle and bottom three points (as below pics in grey line show) Vertical direction (Height) measure inside of window: left and right side (as below pic in grey line show)

The sizes for window's width & height choose the maximum ones as the window size. For width of ready made blinds, advise to add 100mm for Window's width& height to make sure blinds total cover the window frame.

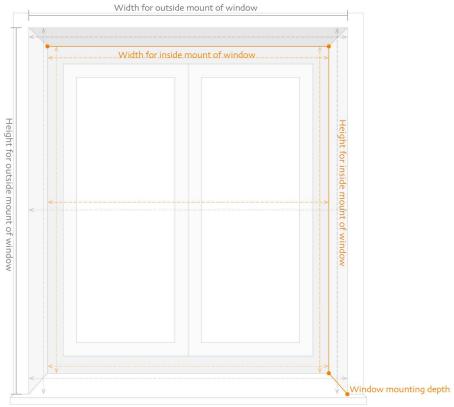

Window mounting depth≥10cm

Installation Type





Inside mount Outside mount

How to determine the installation type?



INSIDE MOUNT /OUTSIDE MOUNT



OUTSIDE MOUNT



INSIDE MOUNT /OUTSIDE MOUNT

Package types

Inner packing



Clear PVC Box



Outer Packing



5 layers thicken carton + angle protection for 4 edges

Packing Real Site















Tianjin Hunters Technology Co., Ltd

- No.6 building, Changqingteng Art & Industrial Park, No.10 Caizhi Road, Jingwu town, Xiqing District, Tianjin, China. Post code: 300392.
- +86 22 23982209
- 1 +86 15922294041