



# **MANUAL HONEYCOMB BLINDS**

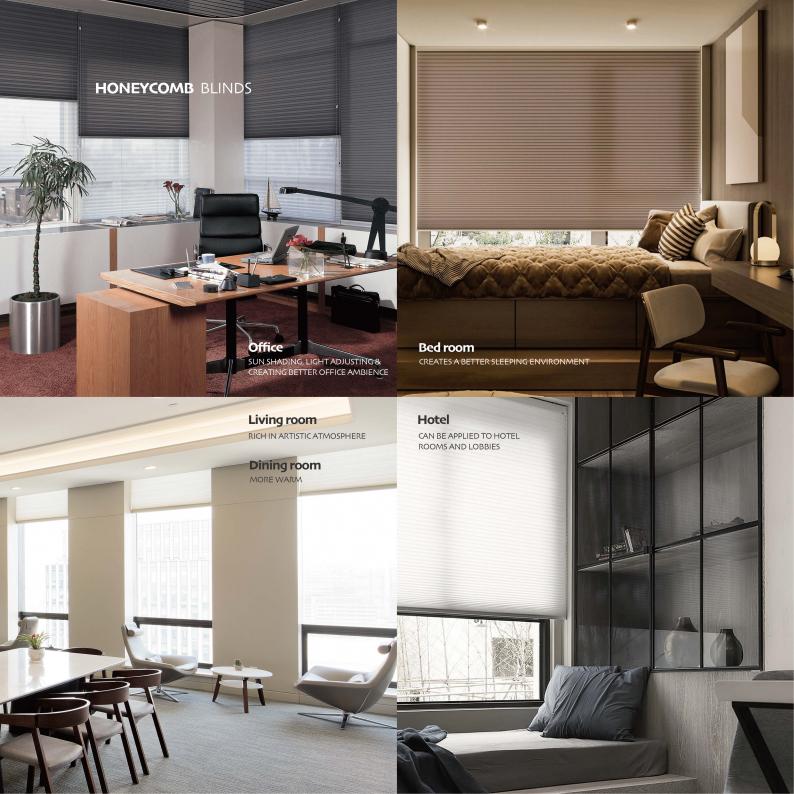

# Structural diagram

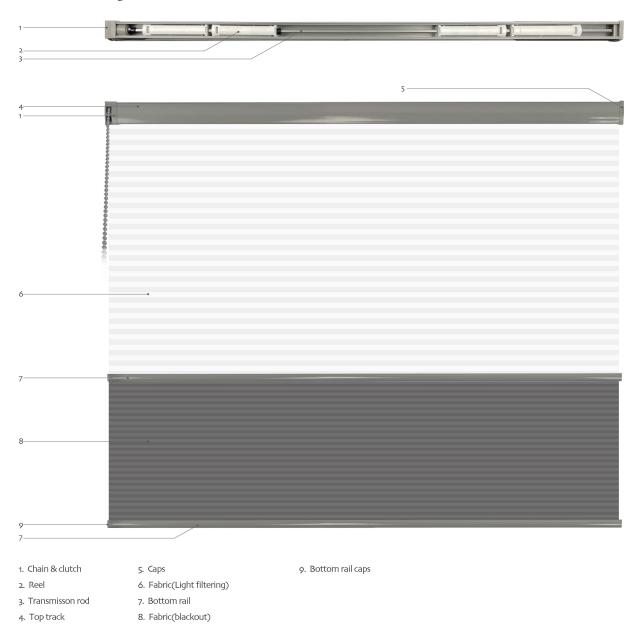

# Components List(38/45mm)

Chain & clutch		Size: 56x51mm Material: POM Color: Optional Chain color: Optional
Fabric		Size:38/45mm Material: Polyester 100% Color: White There are more colors available, please contact customer service for all electronic and physical color cards.
Top track		Size: 56x51mm  Material: Aluminum  Thickness: 1.2mm  Color: White  Color could be customized (MOQ:500pcs)
Reel		Size: 40x38x125mm Material: POM Color: White
Caps		Size: 60x52mm Material: POM Color: White <b>Match with top cover</b>
Transmisson rod		Size:4x4mm Material:Aluminum Color:Aolly
Bottom rail		Size: 50x12mm Material: Aluminum Colour: Optional Thickness: 1.0mm Heavy Duty Bottom rails
Bottom rail caps		Size: 50x12mm Material: POM Colour: Clear
Bracket		Size: 73x30x37mm(L x W x H)  Material: 304 Steel + POM  Spring Insert Clip fix andeasy mounting  Perfect privacy after mounting
Expansion screws	<b>#</b>	Size:M6x3omm

# Components List(25mm)

Chain & clutch		Size: 33×37mm Material: POM Color: Optional Chain color: Optional
Fabric		Size:25mm Material: Polyester 100% Color: White There are more colors available, please contact customer service for all electronic and physical color cards.
Top track		Size: 33x37mm Material: Aluminum Thickness: 1.2mm Color: Grey Color could be customized (MOQ:500pcs)
Reel		Size: 23x30x121mm Material: POM Color: White
Caps		Size: 35x39mm Material: POM Color: Grey <b>Match with top cover</b>
Transmisson rod		Size:4x4mm Material:Aluminum Color:Aolly
Bottom rail		Size: 30x13mm Material: Aluminum Colour: Optional Thickness: 1.0mm Heavy Duty Bottom rails
Bottom rail caps	1	Size: 30x13mm Material: POM Colour: Clear
Bracket		Size: 73x30x37mm(L x W x H)  Material: 304 Steel + POM  Spring Insert Clip fix andeasy mounting  Perfect privacy after mounting
Expansion screws	<b>###</b>	Size:M6x3omm

### Measuring method

Installation of honeycomb blinds have two methods: inside mount & outside mount.

#### Measuring method for Inside mount:


Horizontal direction (Width) measure inside of window: top, middle and bottom three points (as below pics in orange line show) Vertical direction (Height) measure inside of window: left and right side (as below pic in orange line show)

The sizes for window's width & height choose the minimum ones as the window size. For width of ready made blinds, advise to deduct 5-10mm for tolerance.

#### Measure method for Outside mount:

Horizontal direction (Width) measure inside of window: top, middle and bottom three points (as below pics in grey line show) Vertical direction (Height) measure inside of window: left and right side (as below pic in grey line show)

The sizes for window's width & height choose the maximum ones as the window size. For width of ready made blinds, advise to add 100mm for Window's width& height to make sure blinds total cover the window frame.

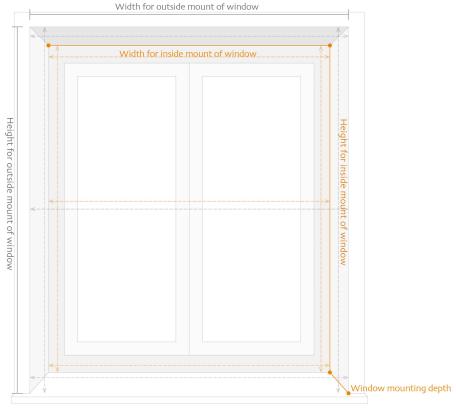

Window mounting depth≥10cm

# **Installation Type**






Inside mount

### How to determine the installation type?



INSIDE MOUNT /OUTSIDE MOUNT

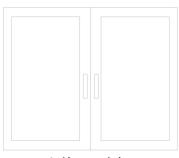

Inside open window
OUTSIDE MOUNT



INSIDE MOUNT /OUTSIDE MOUNT

### Package types

### Inner packing



Clear PVC Box



### **Outer Packing**



5 layers thicken carton + angle protection for 4 edges

### Packing Real Site

















#### Tianjin Hunters Technology Co., Ltd

- No.6 building, Changqingteng Art & Industrial Park, No.10 Caizhi Road, Jingwu town, Xiqing District, Tianjin, China. Post code: 300392
- **(** +86 22 23982209
- 1 +86 15922294041
- ▼ lauraoo1@aliyun.com