

MANUAL ZEBRA BLINDS



Structural diagram



- 1. Caps
- 2. Chain & clutch
- 3. Tube
- 4. Top track
- 5. Fabric
- 6. Bottom rail caps
- 7. Bottom rail

Configuration List

Chain & clutch		Size: ø38 Material: POM Color: Optional Chain colour: Optional Chain handle size: 25x78x16mm Chain handle material: Acrylic Chain handle color: Clear
Chain handle bar (For choice)		Size: 540/640/740/840/940/1040/ 1140/1240/1340/1440/1540mm Material: POM Color: White
Fabric		Size: 60/65/75mm Material: Polyester 100% Color: White/Grey/Beige/Matt black There are more colors available, please contact customer service for all electronic and physical color cards.
Top track	White Gety Broys Met Back	Size: 70x75mm Material: Aluminum Thickness: 1.2mm Color: White/Grey/Beige/Matt black Color could be customized (MOQ:500pcs)
Caps		Size: 75×75mm Material: POM Color: White/Grey/Beige/Matt black Match with top cover
Tube		Size: Ø38 Material: Aluminum Thickness: 1.2mm Color: white Powder coated Matched Color Technology
Bottom rail		Size: 25X3:mm Material: Aluminum Colour: Optional Thickness: 1.0mm Heavy Duty Bottom rails
Bottom rail caps		Size: 54×8mm Material: POM Colour: White
Bracket	F	Size: 74×30×37mm(L × W × H) Material: 304 Steel + POM Spring Insert Clip fix andeasy mounting Perfect privacy after mounting
Expansion screws	###	Size:Móx3omm

Measuring method

Installation of Zebra blinds have two methods: inside mount & outside mount.

Measuring method for Inside mount:


Horizontal direction (Width) measure inside of window: top, middle and bottom three points (as below pics in Orange line show) Vertical direction (Height) measure inside of window: left and right side (as below pic in grey line show)

The sizes for window's width & height choose the minimum ones as the window size. For width of ready made blinds, advise to deduct 5-10mm for tolerance.

Measure method for Outside mount:

Horizontal direction (Width) measure inside of window: top, middle and bottom three points (as below pics in Orange line show) Vertical direction (Height) measure inside of window: left and right side (as below pic in grey line show)

The sizes for window's width & height choose the maximum ones as the window size. For width of ready made blinds, advise to add 100mm for Window's width& height to make sure blinds total cover the window frame.

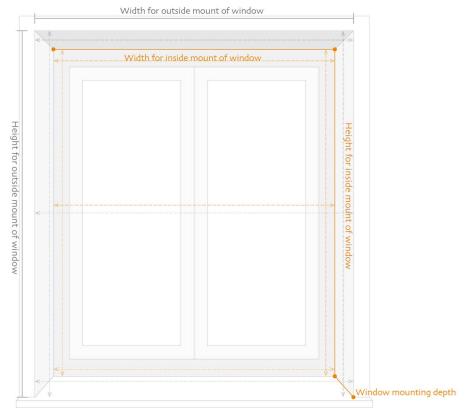

Window mounting depth≥8cm

Installation Type





Inside mount Outside mount

How to determine the installation type?



INSIDE MOUNT /OUTSIDE MOUNT



OUTSIDE MOUNT



INSIDE MOUNT /OUTSIDE MOUNT

Package types

Inner packing



Clear PVC Box



Outer Packing



5 layers thicken carton + angle protection for 4 edges

Packing Real Site















Tianjin Hunters Technology Co., Ltd

- No.6 building, Changqingteng Art & Industrial Park, No.10 Caizhi Road, Jingwu town, Xiqing District, Tianjin, China. Post code: 300392.
- +86 22 23982209
- 1 +86 15922294041
- ▼ lauraoo₁@aliyun.com